
COIN ADJUSTMENT SWITCHES

	SW. 1	SW. 2
1 COIN — 1 PLAYER	ON	ON
2 COINS — 2 PLAYERS		
1 COIN — 1 PLAYER	OFF	ON
1 COIN — 2 PLAYERS		
2 COINS — 1 PLAYER	OFF	OFF
2 COINS — 2 PLAYERS		
2 COINS — 1 PLAYER	ON	OFF
4 COINS — 2 PLAYERS		

TIME ADJUSTMENT SWITCHES

	SW. 3	SW. 4
70 SEC. — 1 PLAYER; EXTENDED PLAY 35 SEC.	OFF	OFF
90 SEC. — 2 PLAYERS; EXTENDED PLAY 45 SEC.		
60 SEC. — 1 PLAYER; EXTENDED PLAY 30 SEC.	ON	OFF
75 SEC. — 2 PLAYERS; EXTENDED PLAY 35 SEC.		
50 SEC. — 1 PLAYER; EXTENDED PLAY 25 SEC.	OFF	ON
60 SEC. — 2 PLAYERS; EXTENDED PLAY 30 SEC.		
40 SEC. — 1 PLAYER; EXTENDED PLAY 20 SEC.	ON	ON
45 SEC. — 2 PLAYERS; EXTENDED PLAY 20 SEC.		

EXTENDED PLAY ADJUSTMENT SWITCHES

	SW. 5	SW. 6
NO EXTENDED PLAY	OFF	OFF
EXTENDED PLAY AT 5000 SCORE	ON	OFF
EXTENDED PLAY AT 6000 SCORE	OFF	ON
EXTENDED PLAY AT 7000 SCORE	ON	ON

MONITOR SELECTOR SWITCH

	SW. 7
GAME EQUIPPED WITH COLOR MONITOR	ON
GAME EQUIPPED WITH BLACK AND WHITE MONITOR	OFF

PLAY TEST - SWITCH

	SW. 8
PLAY MODE	ON
TEST (SEE SEPARATE INSTRUCTION SHEET FOR TEST PROCEDURES.)	OFF

LANGUAGE ADJUSTMENT SWITCH (4 POSITION)

	SW. 1	SW. 2
ENGLISH	OFF	OFF
GERMAN	OFF	ON
FRENCH	ON	OFF